
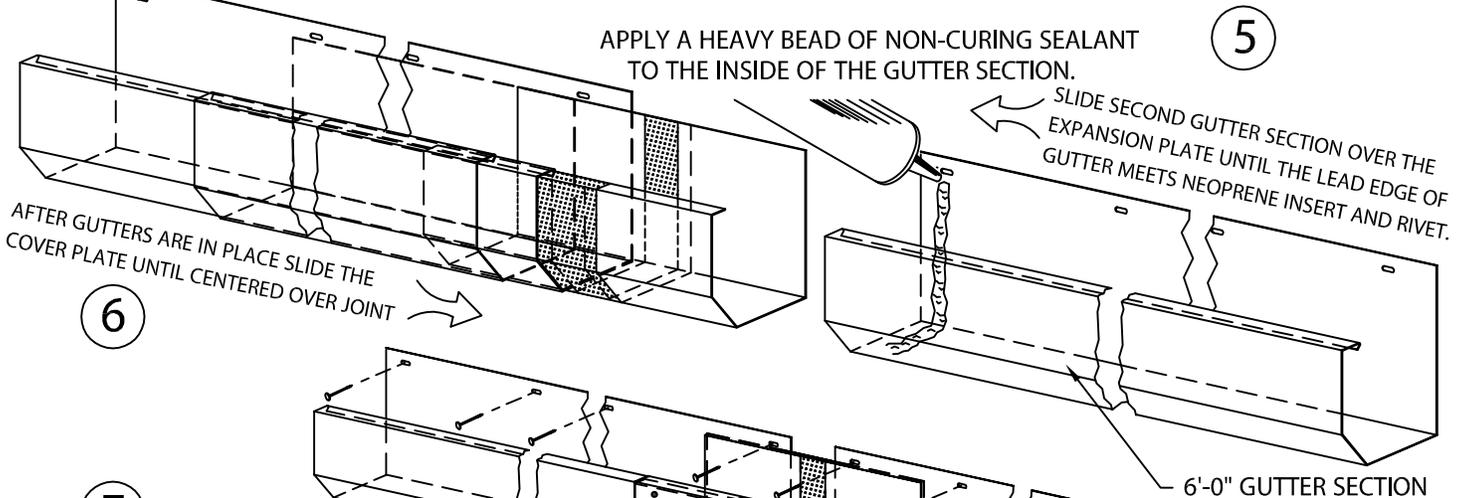
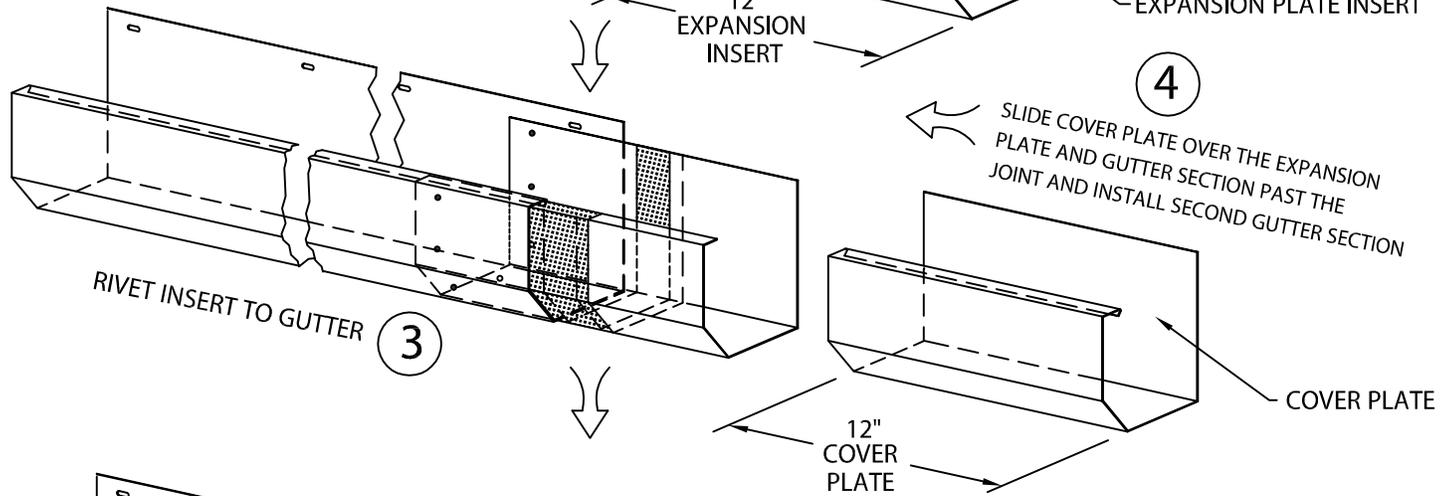


GENFLEX INDUSTRIAL GUTTER

STYLE 2 GUTTER EXPANSION JOINT

INSTALLATION INSTRUCTIONS AND OVERVIEW

1 CUT A 12'-0" SECTION OF THE GUTTER INTO (2) 6'-0" PIECES.
(THE EXPANSION JOINT IS DESIGNED TO FIT BETWEEN THE (2) 6'-0" SECTIONS).

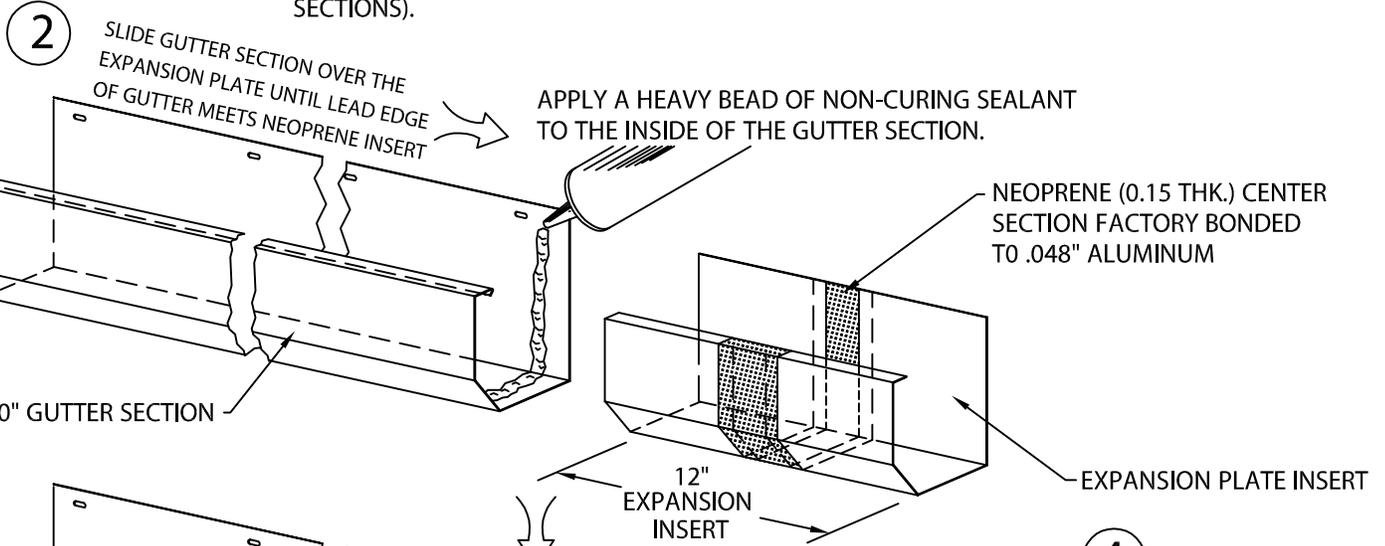

7 COMPLETION

NOTE:

THE COVER PLATE MAY BE POP RIVETED TO THE EXPANSION PLATE AND GUTTER. BUT ONLY ON ONE SIDE TO PERMIT EXPANSION.

GenFlex®

Phone: 800-588-2162
Fax: 800-373-9156
www.metalera.com/genflex

DATE: 04/27/09
DRN BY: JJC
CKD BY: SAK

SHT.# ___ OF ___
DWG# 22112-3978

B